














# ESL 4 & ESL 6 Spare Parts List

[Contact: Heeyas Ltd.](#)

Sr.No.	Particular	Qty	Remark	Photo
1	Rocker Arm Assembly Complete	4	New	
2	Rocker Arm Assembly Incomplete	1	New	
3	High Pressure Fuel Pipe	6	New	
4	Injector	4	Recon	
5	Fuel Pump	4	Recon	

6	Valve Guide	15	New	
7	Plunger	1	New	
8	Spindle Valve	7	New	
9	Nozzles	21	New	
10	Main Bearing	12 Set	New	
11	Piston	2	Recon	

12	Push Rod	7	New	
13	Rotator (Cylinder Cover)	4	New	
14	Fuel Pipe-Injector / High Pressure	12	New	
15	Liners	4	New	
16	Connecting Rod	3	Recon	